


Recess Fitting


A

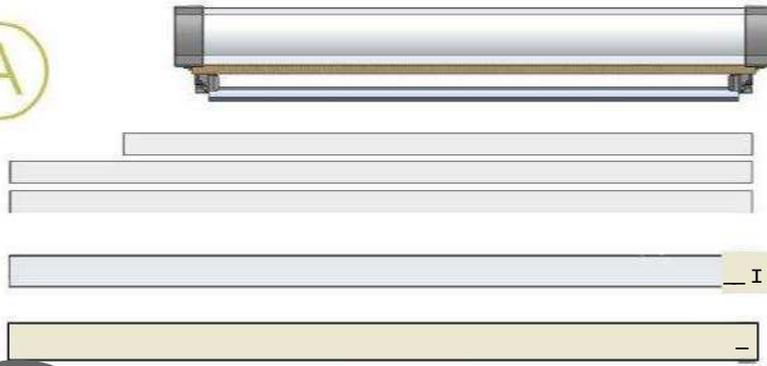

O



TUT

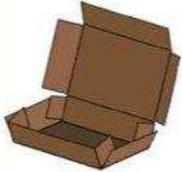


B

1

To allow your Eco blind to be fitted in the recess, a three-piece baton frame is supplied.


This fits into the window as shown

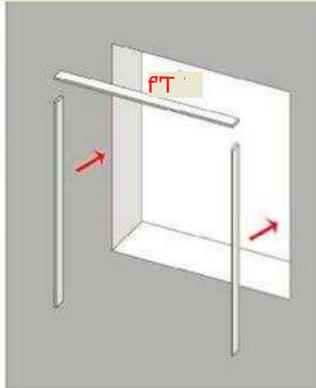

2

Measure and mark the desired distance 'X' for the blind to fit into the recess for each piece of the frame


Then mount each section using the pins supplied and a hammer

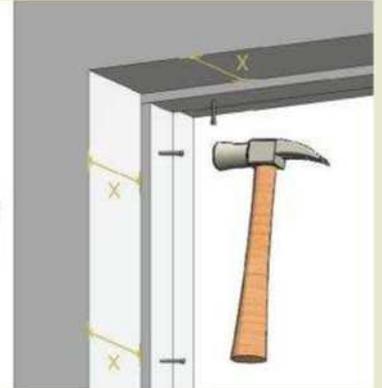

Mount Frame

C

0 Remove tape from guide dogs

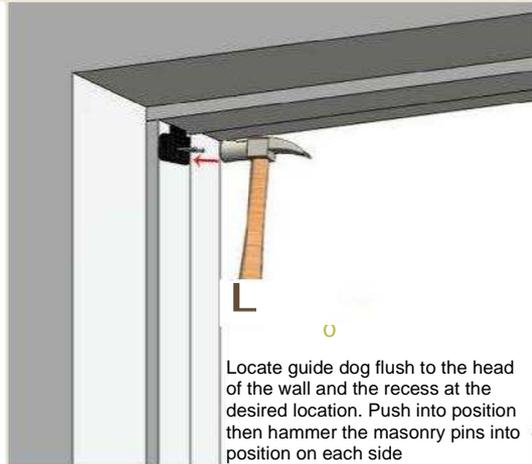

3

Mount cassette onto guide dogs and check level. This is done by lowering the blind to see if running off the square. If so, adjust using .0>EL guide dogs as shown in next



Locate guide dog flush to the head of the wall and the recess at the desired location. Push into position then hammer the masonry pins into position on each side


Fit the Brackets

D

0 Adjust blocks up and down for leveling if required



6mm of adjustment is available on both sides

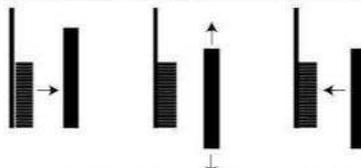

A: Remove block - B: Adjust block - C: Replace block

2

Remount cassette onto guide dogs as per step B3.

Repeat if required to level ---->

Not Level (Off-Square)



Level (Square)




Then fix cassette onto guide dogs using screws provided (Left and Right)



Install Cassette


F

Centralise Handle

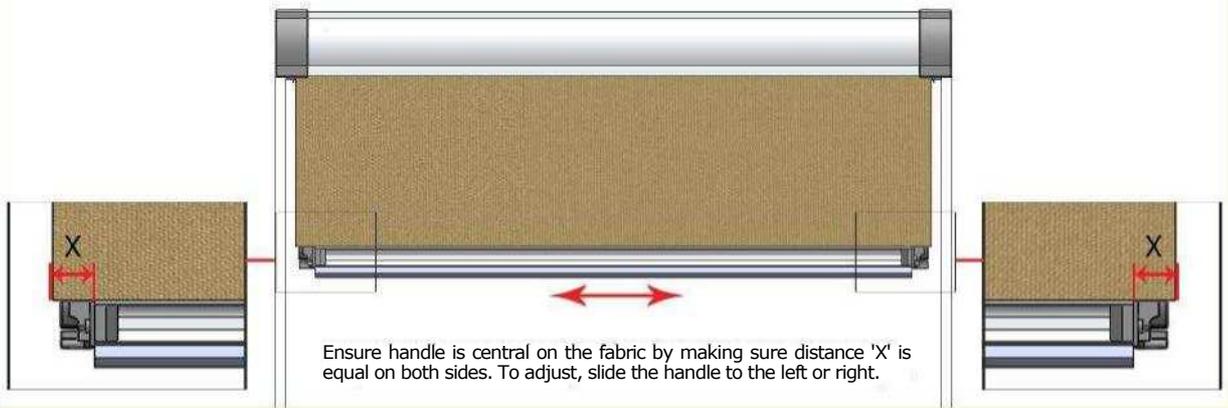


F

Install Side Rail

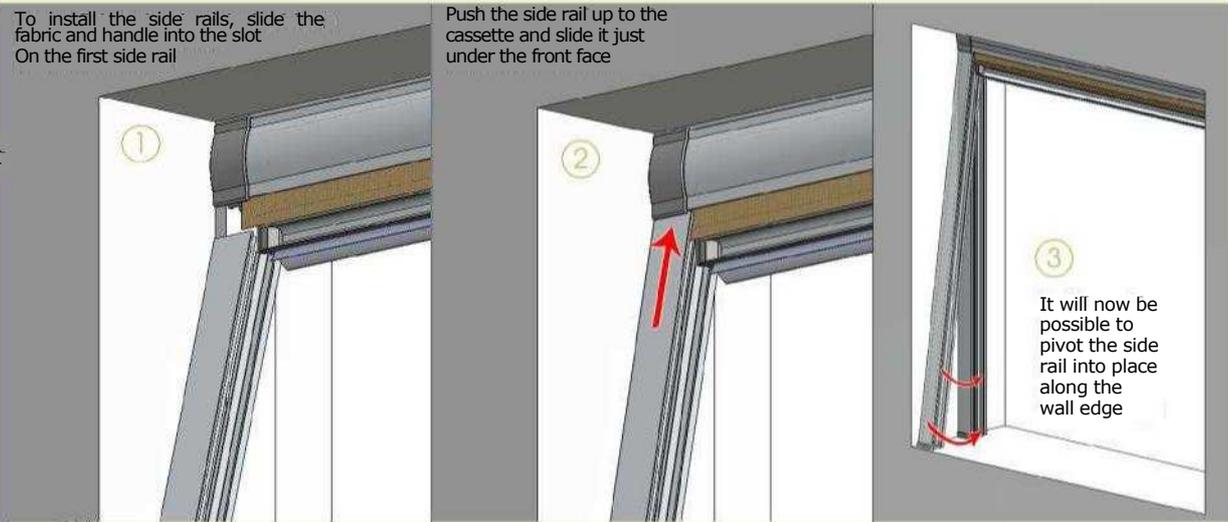

G

Install Side Rails x 2

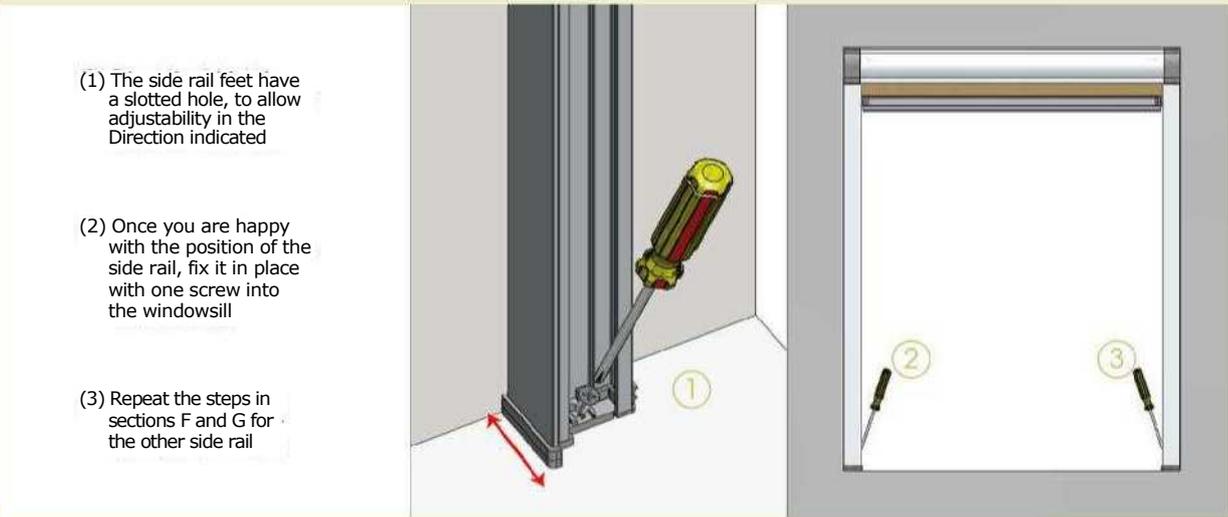

H

How to Operate

(1) To operate the blind, push the handle in; it will rotate away from the side rails and 'unlock'

(2) This will allow you to slide the blind up or down to the desired position

(3) Once the blind is in the desired position, release the handle and the blind will 'lock'

