
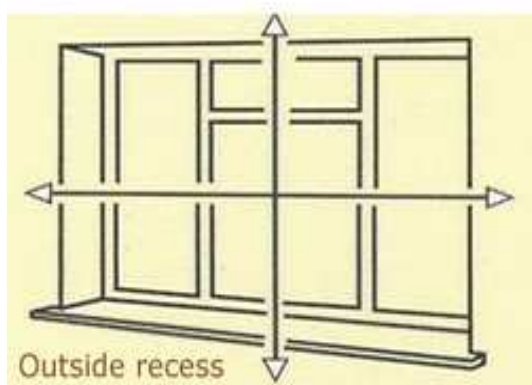


Recess & Exact (Outside) Fitting Explained

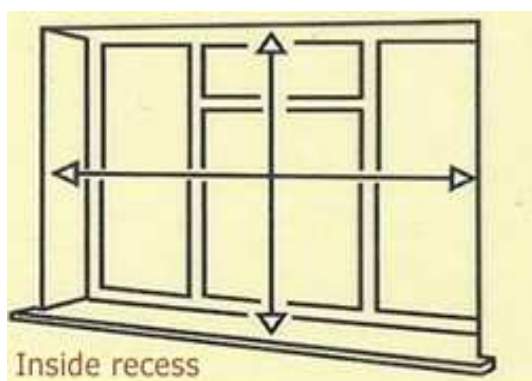

Recess Inside the window frame - This measurement should be calculated by measuring the drop from the recess to the window sill in three places. Then the width by measuring the recess from wall to wall in three places. Take note of any obstructions such as handles or tiles etc. Note the smallest size and mark with a pencil.

Do not deduct from your sizes. We deduct 10-12 mm from if specified in the recess for wood, Venetian, vertical & Roman blinds. 5mm for pleated and 3mm for roller blinds

NB The blind will include the brackets and side winder.

There will be a gap on either side of the fabric. Of you don't want a gap where some light may seep through, you may need to fit the blinds outside the recess.

Exact Outside the Window Frame

This is the measurement that your blind will be made from bracket to bracket.

It is advisable to have an overlap of 75 millimetres on the width and the drop.